

# K1200 LT Reflective Tape Kit

## Application Instructions


This reflective tape kit contains templates and 3M™ Scotchlite™ 580 reflective sheeting. Though the Scotchlite is black, it reflects bright white when struck by light. This kit will add considerably to your conspicuity while driving at night. Ride on—ride safe.

RiderWest

This kit contains two pieces of reflective sheeting and several templates. The two large templates are for the license plate holder. The smaller one (with the key hole marked) is for the trunk latch. The small rectangles are for the indentations on the tip-over wings, near the rider's feet. These indentations face rear and are across from your shins when you're sitting on your K1200LT.

### To applying the Scotchlite sheeting

1. Read all the instructions first so you know what to expect.
2. Remove your license plate holder by removing the two Torx screws and pulling the top toward you. Disengage the two "hooks" at the bottom to remove the license plate holder from the bike. Remove the license plate from the holder.
3. Cut out all of the templates and test-fit them to the appropriate places on your bike (the two templates for the license plate holder are supposed to overlap slightly). Trim templates for a neat fit if necessary. A small scissor, such as a beard trimming/mustache scissor, is very handy for cutting out the key hole. For the straight edges, any pair of scissors will do. If you ruin a template, you can trace what's left of it onto a sheet of paper and reconstruct the part you ruined. If you'd like, to be safe, make copies of the templates before you start cutting.
4. Layout all the templates on the Scotchlite (see picture below) to ensure that you have enough material (there's plenty of extra material for more rectangles-see note below). Tape the templates in place with Scotch tape.
5. Carefully cut out the shapes (as you cut through the tape and the template becomes loose, re-tape where you just cut).
6. Without removing the backing, fit the pieces to your bike to make sure they're cut properly. Trim if needed.

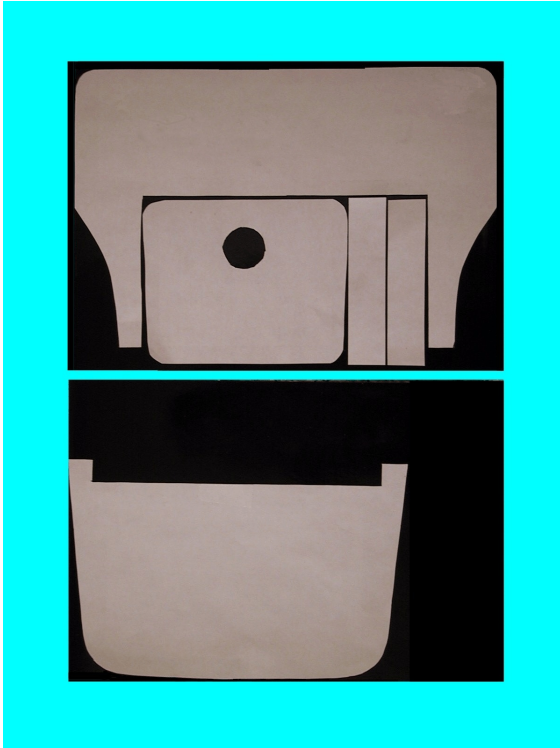

Large piece of Scotchlite

Small piece of Scotchlite

7. Clean all surfaces, especially the latch (it might have oil from your hands on it). Be sure they're completely dry before proceeding.
8. Peel off the backing and carefully affix the Scotchlite. You may want to start with the small rectangles to get the feel of the material.
9. Replace your license plate and holder.

**Note:** With the left-over Scotchlite you can cut additional pieces for various locations on the bike. For example, you can cut four additional little rectangles and placed two on the corners of the chrome bumpers on the saddle bags (left and right) and two on the black part of the tip-over wings, next to where the indentations are (left and right).